

VEI Systems Installation Instructions

D1-FPP-FPP-Mx – Dual Fuel-Pressure (PSI) Gauge

Please read these instructions completely before beginning installation to ensure that you have the tools and skills necessary for installation and operation of this instrument. If you are not sure that you can perform the installation safely, then consult a qualified installer. Further instructions available at www.VEISystems.com/technical.html.

FEATURES

This dual-function instrument monitors fuel pressure simultaneously on two independent displays within a single gauge housing.

MOUNTING

Install the unit through the front of the mounting hole in the dash pod or panel. If you are making a custom dash panel, you will need to drill a 2-1/16" hole. Slide the clamp onto the 2 studs on the back of the instrument. Secure with the 2 thumb-nuts. Use a small drop of threadlocker or nail polish on the thumb-nuts to prevent them from loosening under vibration.

For fuel-pressure, use sender SEN-F100 or SEN-P100F. Mount the sender onto the fuel system in an appropriate location. Generally, you would need to connect to the fuel-rail near the injectors. In most cases, there will be a fuel-pressure test-port at that point. You can also use the test port with an appropriate adapter. Avoid using teflon tape or compound as this may eventually break off and get into the fuel stream, causing blockage in the fuel lines. This can be catastrophic to the engine. If you experience leaks, try tape only on the back half of the threads on the sender. The engine must be well grounded to the chassis & battery.

WIRING

The wires should be connected as below using crimp-on butt-splice connectors, or soldered and sealed with heat-shrink tubing. Before connecting any wires, you should either disconnect the battery power, or carefully connect the wires in the order shown. If not, you may damage the instrument. Use an existing fuse in the fuse panel, or an external fuse to supply power to the instrument. The D1 series instruments use approx. 130mA of current average, and approx. 210mA maximum, so ensure the fuse is sized appropriately. For a typical 6- or 7-gauge setup, a single 5 Amp fuse is good.


FUEL PRESSURE SENSOR:

IMPORTANT: The fuel-pressure sensor is powered by 5 Volts, which is provided by the gauge. **DO NOT** connect the sensor to 12V as this will permanently damage the sensor.

- o BLACK -- connect to a solid chassis ground, preferably the same point where the gauge is grounded. Do not connect this ground to the engine.
- o RED -- connect this to the purple 5Volt wire on the gauge (the same point that the boost sensor is connected to).
- o WHITE – this is the output signal of the sensor. Connect it to the grey input wire on the gauge (channel 2).

INSTRUMENT:

- o BLACK -- connect to a solid chassis ground under the dash, or directly to the battery. You may need to expose the metal connection point under the dash by scraping or lightly sanding it. A ring terminal and a screw should work well in most cases. The black wires (grounds) of both sensors should be connected to the same point.
- o RED -- connect this to a source of **switched** +12V power. This will usually be found at or near the ignition switch, and will usually have a relay wired through the ignition switch. An alternate source of this is a switched power line from a nearby light or accessory (radio, etc). If you are unsure that the wire can support the power required for the instrument, then use an external relay.
- o GREEN – connect this wire to the positive line (+12V) from the headlight switch. When this line receives a positive voltage, the gauge will use the "park-lights" brightness setting. You may on older vehicles connect this wire to the interior dash lights that come on when the park lights are switched on, however on newer vehicles the lights may be PWM dimmer (oscillating on and off rapidly to control brightness), so the gauge may flicker. Alternatively, if setting up a racing-mode display, this can be connected to a separate mode switch (12V or 0V signal).
- o WHITE – this is the input for the first display channel. Connect this to the yellow output wire from the fuel-pressure sensor.
- o GREY – this is the input for the second display channel. Connect this to the white output wire from the fuel-pressure sensor.
- o PURPLE – this wire supplies +5V for the fuel-pressure sensor. Connect this to the purple wire on the red wire on the fuel-pressure sensor.

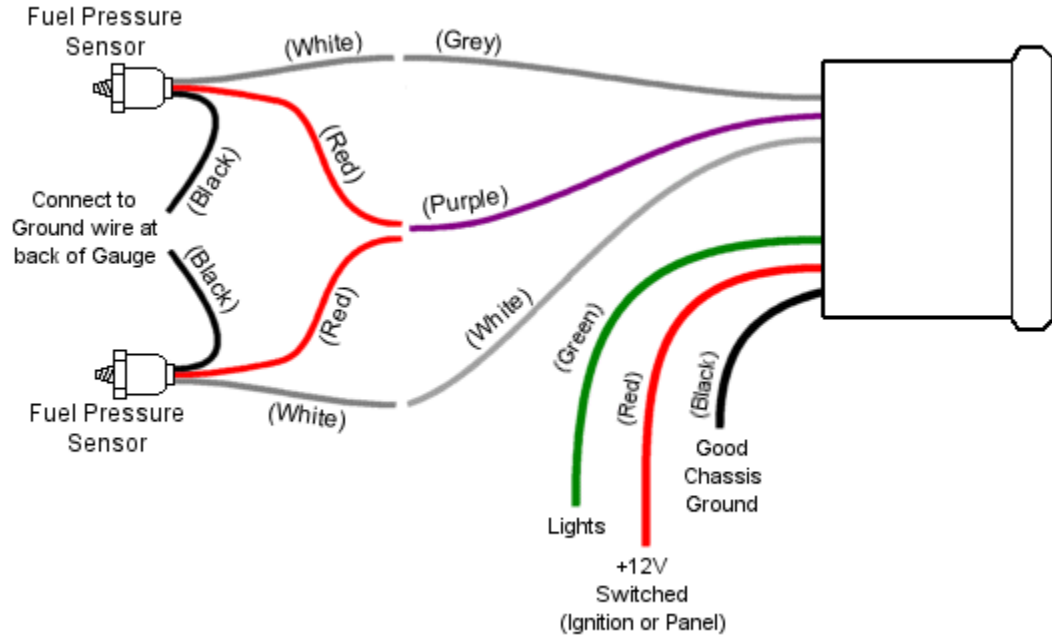

OPERATION

Press and hold the button for a few seconds to change the mode. Press and release quickly (tap the button) to change the setting in any mode. Modes are as follows:

| MODE | DISPLAY | SETTINGS |
|------------------------------|------------|---|
| Normal | (Pressure) | Channel 1 shown on upper display and channel 2 on lower display, unless swapped (see next setting below). |
| Channel swap | Ch1 / Ch2 | Allows you to swap the position of the upper & lower displays if required. |
| Set low fuel-pressure alarm | L . 40 | Sets the low fuel-pressure alarm threshold from 1 to 70 PSI. |
| Set high fuel-pressure alarm | H . 50 | Sets the high fuel-pressure alarm threshold from 30 to 99 PSI. |
| Brightness Regular | Br . 9 | Last digit shows regular brightness level from 1 to 9. |
| Brightness park-lights on | BP . 1 | Last digit shows brightness level with lights on from 1 to 9. |

WARRANTY & LIABILITY

Neither VEI Systems, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 1 year from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty void if product enclosure opened.